

# User Manual



## Models:

MR8.40C, MR11.40C

Thank you for trusting UV Dynamics with your drinking water disinfection!

Your UV Dynamics NSF/ANSI 55 Class "A" Mini-Rack System consists of a stainless steel disinfection chamber, quartz glass sleeve, UV lamp, electronic power supply, Cold Spot™ fan, UV sensor, top plate, and filter housings. Water flows through the filter housings and into the disinfection chamber where it is exposed to UV light from the lamp, which sits inside the quartz glass sleeve. The electronic power supply powers the UV lamp, alarms if it fails, and reminds you to change your lamp every year. The UV sensor monitors the UV level in real time and alarms if there is a drop in performance.


The attached instruction manual contains information regarding the UV disinfection portion of this system.

This sheet contains information regarding the integrated filter housings and mounting rack.

**Please read and follow all instructions prior to installation.** Proper installation and maintenance is required to ensure reduction of microbiological contaminants.

## GETTING TO KNOW YOUR MINI-RACK SYSTEM


Beyond the components included with your UV disinfection system, your Mini-Rack System also includes a top plate, ballast mounting hardware, and up to 3 filter housings.

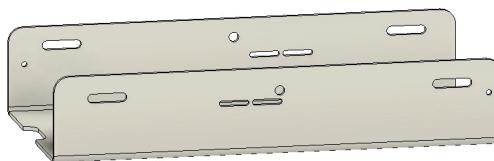

Top Plate (1)



Ballast Mounting Hardware

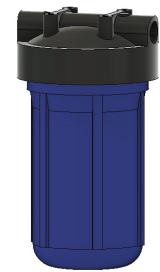

Filter Housing(s)

## INSTALLATION PROCEDURE

The 'U' shaped top plate can be rotated horizontally to allow installation in either direction.

Your Mini-Rack System is shipped with the filter housing heads already affixed to the top plate and the interconnect between the filter housings and UV chamber installed. If your system has more than one filter housing, the filter heads will already be plumbed together.

Mount the top plate to the wall using appropriate hardware (not provided). Once filled with water, your Mini-Rack System will be very heavy; it is important to fasten the top plate securely and structurally to the wall.

Install new plumbing, paying attention to correct direction of water flow.

**WARNING:** If soldering, do not allow heat near plastic threads or fittings



Mount the electronic ballast on the front of the top plate, using screws and nut provided. Using one (1) screw and one (1) nut, hang the ballast vertically from the top plate to facilitate reading of the 2 digit display. See FIG. 1. If preferred, the ballast can be wall mounted next to the system using appropriate hardware (not provided).

Your Mini-Rack System has a drain port at the bottom of the UV chamber for easy draining to assist with winterization.

UV disinfection requires a minimum 5 micron pre-filter. (consult NSF/ANSI 55 Class "A" instruction manual for water quality requirements) Filter cartridges are not supplied by UVDynamics. Installing dealers may supply filter cartridges, or you may need to source them yourself. Filter cartridges must have plastic wrapping removed before installation. **Do not install filter cartridges until after chemical disinfection of plumbing has been finished.**

**Filter cartridge replacement:** The frequency of filter cartridge replacement will depend on your input water and the specifications of your cartridge. Low water pressure usually indicates the end of service life for filter cartridges. Consult cartridge manufacturer.

A sparing application of food grade silicone on filter housing O rings may ease future disassembly.

Note: Filter housings need to be depressurized (via a pressure release button or opening a faucet after the supply is closed) in order to be opened.

**Note:** The filter housings installed on your UVDynamics Mini-Rack System are rated for 40°F-100°F (4°C-38°C) and 45-85 PSI. Please see filter housing labels for details. Temperatures or pressure exceeding these limits may cause leaks or ruptures, resulting in damage or severe injuries.

## TROUBLESHOOTING

Drop in water pressure	Filter cartridge is still in plastic packaging. Filter cartridge needs replacing.	Remove filter cartridge packaging. Replace filter cartridge.
Can't open filter housing	Filter housing is still pressurized.	Depressurize filter housing by closing water supply and opening a tap to release some water.

## WARRANTY

UVDynamics water disinfection systems are supported with a 'free from defects' **Workmanship and Material** warranty as follows:

- A ten year pro-rated warranty on the stainless steel disinfection chamber
- A three year warranty on the UV power source
- A one year warranty on UV lamps, sleeves, sensor, solenoid, and filter housings

Warranty commences from date of purchase. Proof of purchase required

UVDynamics will repair or replace, at its option, any defective parts covered by the warranty. Shipping and handling are not included in this warranty. Parts for warranty evaluation will be collected from you by your Dealer. Replacement parts provided under warranty will be sent to your UVDynamics dealer. Parts repaired or replaced under the pro-rated warranty will be covered under warranty to the end of the original warranty period. This warranty is also subject to the conditions and limitations outlined under the heading "General Conditions and Limitations" below.

### Warranty for Replacement Lamps and Parts

UVDynamics warrants replacement lamps, purchased for annual routine maintenance and other parts purchased to repair product components that are no longer covered by the original warranty, to be free from defects in material and workmanship for a period of one (1) year from the date of purchase. During this time, UVDynamics will repair, or replace at its option, a defective replacement lamp or part free of charge except for shipping and handling charges. The warranty period on replacement lamps and parts will be verified using date codes and/or purchase receipts. Your UVDynamics Dealer will advise you on whether the defective item needs to be returned to UVDynamics for analysis.

### General Conditions and Limitations



None of the above warranties cover damage caused by improper use or maintenance, accidents, acts of God or minor scratches or imperfections that do not materially impair the operation of the product. The warranties also do not cover products that are not installed as outlined in the applicable Owner's manual. These limited warranties outline the exclusive remedy for all claims based on a failure or defect in any of these products. They are in lieu of all other warranties whether written, oral or implied or statutory.

Under no circumstance shall UVDynamics have any liability for liquidated damages for collateral, consequential or special damages or for loss of profits, or for actual losses or for loss of production or progress of construction, regardless of the cause of such damages or losses. In any event, UVDynamics aggregate total liability shall not exceed the specific product purchase price. The purchaser agrees to indemnify and hold harmless UVDynamics from all claims by third parties in excess of these limitations. UVDynamics does not assume any liability for personal injury or property damage caused by the use or misuse of any of its products. UVDynamics shall not in any event be liable for special, incidental, indirect or consequential damages. UVDynamics liability shall, in all instances, be limited to replacement of the defective product or part and this liability will terminate upon expiration of the applicable warranty period.

# INSTALLATION & OPERATIONS MANUAL

## Models

**8.40C • 8gpm**  
**11.40C • 11gpm**  
**14.40C • 14gpm**  
**20.40C • 20gpm**

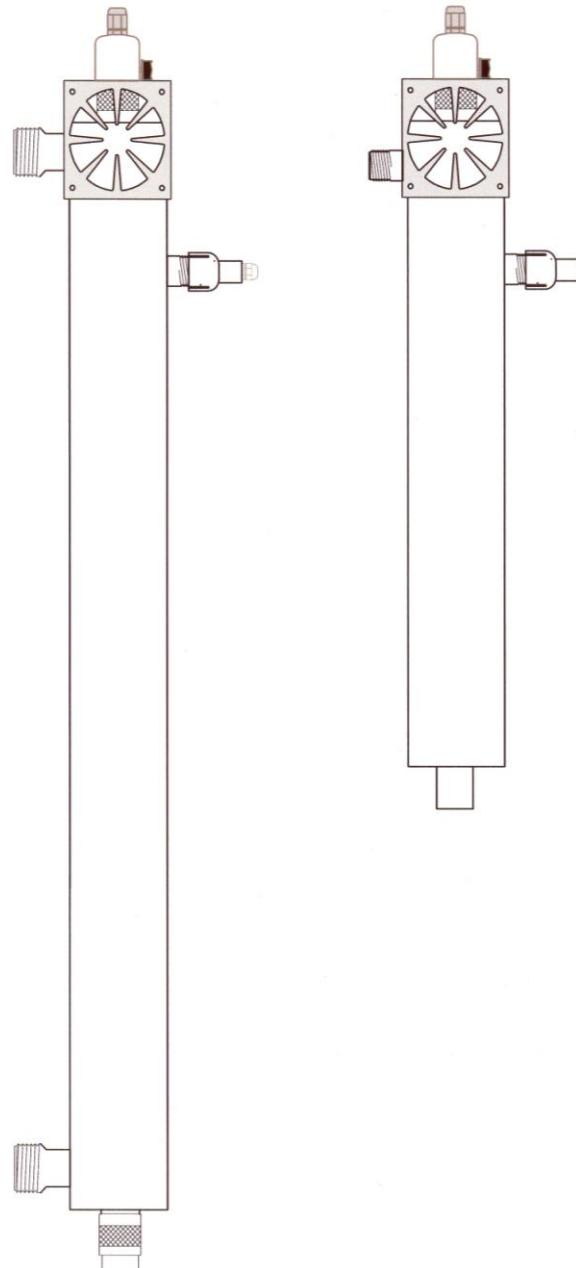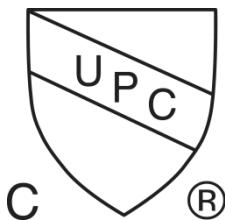

Drinking Water  
NSF/ANSI 55

System tested and certified by  
IAPMO against:  
NSF/ANSI Standard 55 Class A  
NSF/ANSI 61  
NSF/ANSI 372  
CSA-B483.1

**UV Dynamics**  
a Castle Circuits Inc. Business Group  
315 Neptune Crescent  
London, Ontario  
Canada, N6M 1A9

1.800.667.4629  
1.519.452.1701

[support@uvdynamics.com](mailto:support@uvdynamics.com)

**UV Dynamics®**

[WWW.UVDYNAMICS.COM](http://WWW.UVDYNAMICS.COM)

# Installation and Maintenance Manual



**READ AND UNDERSTAND ALL  
INSTRUCTIONS BEFORE INSTALLING OR  
USING THIS PRODUCT**

## TABLE OF CONTENTS

• Safety Instructions	1
• Application Overview	1
• Water Quality	1
• Installation Considerations	1
• Installation Procedure	2
• Disinfection Procedure	2
• UV Power Source Features	3
• Operating and Maintenance	4
• Component Identifier	
– model 8.40C	5
– models 11.40C, 14.40C, & 20.40C	6
• Installation Example	
– model 8.40C	7
– models 11.40C, 14.40C, & 20.40C	8
• Low UV Alarm – Diagnostic Flow Chart	9
• Specifications & Warranty	10

## UV RADIATION HAZARD

NEVER OPERATE UV LAMP OUTSIDE OF THE UV  
DISINFECTION CHAMBER – EXPOSURE TO UV LIGHT CAN  
RESULT IN SEVERE BURNING OF SKIN AND EYES



## Safety instructions – Please read carefully



**1 DANGER** – To reduce risk of electrical shock this system must be grounded. Connect your UV system to a grounded, GFI protected (3 pronged) receptacle (120V, 60Hz) and ensure that the lamp connector ground wire is connected to the ground stud on the top of the disinfection chamber.

**Note:** Power source for applications outside of North America must match requirements of the unit (eg. 240V, 50Hz). Do not plug the unit in if any of the external surfaces or electrical parts are wet. Condensation on the disinfection chamber is normal.

**2** To avoid possible electric shock, special care should be taken since water may be present near electrical equipment. Unless referred to in these instructions, do not attempt repairs yourself. Contact the installing dealer or manufacturer for service advice.

**3** Do not operate this system if it has a damaged electrical cord or plug, is malfunctioning, or has been dropped or damaged in any way.

**4** Do not use this unit for anything other than its intended potable water application. The use of attachments not recommended, approved, or sold by the manufacturer/distributor may result in an unsafe condition.

**5** Before any cleaning or maintenance, always disconnect the unit from the AC supply voltage and de-pressurize the system.

**6** Protect your unit from freezing. Drain all water from the unit if freezing temperatures exist.

**7** System must be installed in accordance with all applicable codes and regulations.

**8** If system indicates a failure state, water needs to be boiled before use and the system and plumbing are required to be disinfected after system failure is resolved.

**9** This installation and operating manual is to be kept with UV system.

## APPLICATION OVERVIEW

UV Dynamics UV disinfection systems certified to NSF/ANSI standard 55 are suitable for use on waters which are known to be contaminated. This product uses a proprietary extended cold spot lamp design along with an active temperature controlled cold spot cooling fan, resulting in improved lamp output maintenance during stagnant hot water conditions. The UV display indicates actual dose in  $\text{mj}/\text{cm}^2$  at rated flow. To insure trouble free operation of your UV Dynamics UV disinfection system it is important to ensure that your water source meets the minimum water quality parameters specified. Failure to meet minimum water quality standards may result in excessive maintenance requirements or, in the case of UVT% below 70%, may preclude the system from reaching the minimum operating UV fluence (dose).



## WATER QUALITY

Your UV disinfection system requires clean water for optimum performance. You should only operate your unit if the source water meets the following standards:

Turbidity	< 1 NTU
Suspended Solids	< 10 mg/L
Colour	None
Tannins/Other Organics	< 0.1 ppm
Total Iron	< 0.3 mg/L
Manganese	< 0.05 mg/L
Hardness	< 7 gpg
UVT%	> 80%

If your source water does not meet these water quality parameters, additional pre-treatment will be required. Operation of this system with water that does not meet these quality standards will increase the occurrence of nuisance alarms, and result in increased maintenance and more frequent lamp replacement. Operating the system with excessively low UVT% (ultraviolet transmission percentage) will reduce UV intensity to the point where operation of the system is not possible.

## INSTALLATION CONSIDERATIONS

**1** Select a disinfection system mounting location where a potential leak will not cause water damage. UV Dynamics is not responsible for water damage. When the disinfection system can only be located where water damage is a possibility, the installation of an automatic leak detector / shut off device is highly recommended

**2** UV Dynamics disinfection devices are designed to be installed on the cold water line only.

**3** Cold water source must be connected to the inlet port only.

**CAUTION:** reversing the flow direction by connecting the water source to the output port could result in reduced disinfection performance and improper operation of the flow regulator.

**4** Install your UV Dynamics disinfection system indoors in a protected area where the temperature does not fall below 15°C (60°F) and the humidity level is low (to prevent condensation on the chamber). This unit functions ideally in a temperature range from 15°C - 29°C. (60 - 85F)

**5** Models 8.40C, 11.40C and 14.40C must be installed vertically. Model 20.40C may be mounted horizontally with inlet and outlet ports orientated upwards only. Installing with ports orientated downward will result in air being trapped in the disinfection chamber, resulting in reduced disinfection performance and erratic UV sensor operation.

**6** Use teflon tape on all pipe connections. **DO NOT USE ANY OTHER SEALANT.**

**7** If the AC power distribution system is subject to frequent power line surges or electrical storm activity, the installation of an external surge protection device is required. Preferably, the surge protection device will have an indicator showing that the surge protection components have not failed and the device should be checked frequently.

**8** If the water system in which the UV disinfection system is to be installed includes a pump, the UV disinfection system should not be connected to the same AC supply circuit as the pump. Pumps can create significant voltage drop on start-up which may be sufficient to trigger an abnormal operating condition alarm in the UV power source. In these cases connection of the UV disinfection system to an isolated AC supply will minimize nuisance alarms.

**9** If the installation location is subject to frequent power outages or brown out conditions an inverter type uninterruptable power system (UPS) device with true sine wave output should be installed on the AC supply to ensure reliable system operation.

**10** Do not connect UV Dynamics disinfection systems directly to PEX tubing or other plastic piping. Plastic material will suffer structural degradation, and possible service failures, when subjected to long-term UV light exposure. PEX tubing and plastic piping can be connected directly to the inlet port **if it is located on the bottom of the chamber**. All side ports will require the use of a metallic light dam (16"/40cm section of metallic tubing, street elbow or stainless steel flex connector suitably bent to prevent direct UV radiation)

#### **4 SOLENOID VALVE INSTALLATION**

On vertically mounted systems a solenoid valve can be directly mounted to the inlet port. In all other mounting configurations the solenoid valve should be isolated by 12" (30cm) of piping on either port of horizontally mounted disinfection chambers, and the output port of vertically mounted chambers.

*Mounting of the solenoid valve directly to the ports of a horizontally mounted chamber or directly to the output port of a vertically mounted chamber will result in premature solenoid coil failure due to the elevated temperature conditions that exist during periods of no water flow.*

#### **5 QUARTZ SLEEVE INSTALLATION - Model 8.40C**

Verify that the red "O" ring is installed in the inside groove of the gland nut, and place the black "O" ring on the open end of the quartz sleeve approximately 1"(25mm) from the end. Then push the quartz sleeve into the gland nut until the sleeve touches the top of the retainer edge in the gland nut. *Failure to insert the quartz sleeve fully into the gland nut will allow excessive sleeve movement during water flow, resulting in possible water leakage and sleeve breakage.*

#### **6 QUARTZ SLEEVE INSTALLATION - All other Models**

Install one of the black "O" rings on the end of the quartz sleeve and position approximately 1"(25mm) from the open quartz sleeve end. Carefully insert the other end of the quartz sleeve into the disinfection chamber. Install the second black "O" ring on the remaining quartz sleeve end which is now emerging from the end of the chamber and adjust sleeve position so that equal amounts of quartz sleeve extend from both ends of the disinfection chamber. Install the gland nut with the black light shield on the bottom or non lamp end of the disinfection chamber. The other gland nut is used on the lamp end of the disinfection chamber. Hand tighten both gland nuts.

**7** Place the lamp spring, then the lamp into the quartz sleeve. Install the *Cold Spot Fan™* over the gland nut. Holding the top of the lamp, attach lamp to the lamp connector. Ensure the lamp is orientated so that the lamp wires are not in the path of the UV Sensor Probe. **FAILURE TO ORIENTATE THE LAMP CORRECTLY COULD RESULT IN REDUCED UV DOSE INDICATION** Push the lamp connector down snugly into the gland nut and tighten the lamp connector set screw.

**WARNING: do not over tighten as plastic threads are easily damaged.**

Connect the lamp connector cable labeled **FAN** to the *Cold Spot Fan™* assembly.

#### **8**

Remove the nut from the ground stud at the top of the unit. Next, place the ground wire (green wire with yellow stripe) over the stud and re-install nut and tighten. **FAILURE TO GROUND CHAMBER MAY RESULT IN AN ELECTRICAL SHOCK HAZARD AND ERRATIC UV SENSOR BEHAVIOUR**

#### **9**

Install UV Sensor Probe. The probe must be hand tightened completely to insure accurate calibration. Connect UV Sensor Probe plug into port labeled UV Sensor on the UV power source.

**Caution – Hand tighten only**

#### **10**

Open the valves on either side of the disinfection chamber. Check for leaks. Open supply valve slowly and bleed air from system.

Connect UV power source to AC line. UV power source audio alarm will sound three times before igniting the lamp.

Your UV Dynamics disinfection system is now ready for service. Before service begins, all household plumbing lines should be chemically disinfected.

## **Installation Procedure**

The UV disinfection system should be the last step of your water treatment system. Choose a location for installation with a close electrical outlet. Note the direction of water flow in the supply line. Refer to the installation example diagrams and check that you have all necessary fittings for installation. **Note:** Ensure that the chosen mounting location has adequate clearance to facilitate quartz sleeve and UV lamp replacement.

**1** Shut off the main water supply valve.

**2** Mount the unit to the wall using the mounting brackets provided. Mount power source beside the chamber. Ensure that the chosen power source location is not subject to any possible dripping of condensation from either plumbing or system components

**3** Install new plumbing as per diagram. **Note:** When installing the 5 micron pre-filter, make sure the flow arrows point in the same direction as the water flow. **WARNING: if soldering, do not allow heat near plastic threads or fittings.**



## DISINFECTION PROCEDURE

**THE FOLLOWING DISINFECTION PROCEDURE IS GENERALLY ACCEPTED AS BEING SUITABLE FOR THE DISINFECTION OF PLUMBING SYSTEMS KNOWN TO BE CONTAMINATED.**

**IF YOU ARE UNCERTAIN ABOUT THE EFFICACY OF THIS PROCEDURE, YOU ARE ADVISED TO CONTACT THE LOCAL HEALTH AUTHORITY RESPONSIBLE FOR WATER SAFETY.**

The UV disinfection process takes place only in the UV disinfection chamber and the process provides no residual disinfection capability, **therefore it is necessary to chemically disinfect the entire plumbing system before using water treated by the UV system.** The plumbing system should also be disinfected if the power goes out for several hours or more, or if the unit has been accidentally shut-off for several hours or more. It is advisable to disinfect the plumbing lines at least once a year.

**1** The disinfection of the plumbing system is most readily accomplished by removing the 5 micron sediment filter cartridge and adding 250ml - 500ml (1 -2 cups) of standard 5.25% concentration un-scented chlorine bleach to the empty filter housing and re-installing.

**2** Verify that the UV disinfection unit is connected to the AC supply voltage and operating properly. The addition of chlorine bleach to the plumbing system may cause the water to go cloudy, resulting in a low UV alarm condition. If a solenoid valve is installed it will be necessary to place the solenoid valve in the manual open mode.

**3** Operate **all faucets, fixtures and appliances** until you clearly smell chlorine, then shut off. *This includes shower heads, outside taps, dishwashers, laundry equipment and any appliance connected to the plumbing system.*

**4** Leave the bleach solution for 6 to 8 hours, preferably overnight.

**5** Re-install the sediment filter cartridge and thoroughly flush the system at all fixtures and appliances connected to the system.

**Note:** The introduction of a chlorine disinfection solution to a hot water heater that has been used with untreated hard water or water with excessive iron, manganese or other organic contaminants may lead to oxidization of these materials. If you feel that these conditions may apply to your installation, a thorough flushing of the hot water tank should be undertaken to eliminate the oxidized material from the system.

## UV POWER SOURCE FEATURES

The micro-processor controlled UV power source supplied has both audio and visual alarm indicators to validate lamp operation and an integral annual lamp change reminder timer. A two digit display is provided to display the actual UV dose, lamp life remaining (when timer reset button is pressed), and various error codes to aid in system diagnostics. If the actual UV dose falls below 40mj/cm<sup>2</sup>, the unit goes into the low UV alarm mode and the solenoid valve, if installed, will be de-activated.

**UV power source initialization sequence:** When AC power is applied to the UV power source the lamp is ignited, as indicated by the green lamp-on LED, after which a self test of the annual lamp failure LED and alarm buzzer occurs. This test consists of three buzzer beeps and three red lamp failure LED flashes. The two digit display indicates the actual UV dose. If a solenoid is connected to the UV power source, it will activate when the UV level reaches 40mj/cm<sup>2</sup>.

**Normal Operation:** During normal operation, the green lamp-on LED is illuminated and the two digit display indicates the actual UV dose in mj/cm<sup>2</sup>.

### Diagnostic Display

Pushing the timer reset button on the UV power source initiates the diagnostic display and sensor self test function of the system. In sequence, the display will output the parameter followed by the parameter value;

- (lr) Lamp life remaining (weeks)
- (ul) UV level
- (tf) Disinfection Chamber temperature F°
- (tc) Disinfection Chamber temperature C°
- (fn) *Cold Spot Fan™* status 1=on 0=off
- (at) Alarm threshold – "C" for certified system
- **E7** if the sensor self test detected a sensor failure

**Note:** The diagnostic display does not function if a lamp failure condition exists.

**Lamp failure:** When the UV power source detects a lamp failure or enters the auto shut down mode due to abnormal operating conditions, the alarm buzzer sounds and flashes the red *lamp failure LED*, the green *lamp-on LED* and 2 digit display are extinguished. If connected, the solenoid valve will terminate the water flow.

**Note:** The UV power source is designed to shut down if the AC input voltage is outside of operating limits. When a lamp failure alarm is active, the unit should be unplugged from the AC power source for fifteen seconds and then reconnected to the AC power source. If the failure was due to out of limit AC power, the unit will re-ignite the lamp and operate normally.

**Chamber Over Heat:** When the chamber temperature exceeds 45° C (113° F) the chamber overheat code (**oh**) will be displayed.

**Lamp timer operation:** The annual lamp change reminder timer will run for approximately one full year. At the end of the one year period the **E5** lamp change reminder error code will be displayed and the buzzer will sound. The **E5** error code indicates that the lamp timer function is in the 28 day grace period. Pushing the timer button during this grace period will silence the buzzer for a seven day period but the **E5** error code will remain. The buzzer reset can be activated a maximum of four times during the 28 day grace period. Under no circumstance does the grace period exceed 28 days. At the expiry of the 28 day grace period the **E5** error code is replaced by **E6**. When the **E6** error code is active the lamp must be replaced and the lamp timer reset.

**Note:** *As long as the UV level reading on the two digit display is above 40mj/cm<sup>2</sup> the solenoid valve drive is not disabled.*

**Time remaining:** When the lamp change reminder timer is not in the grace period or lamp change alarm mode, the number of weeks of lamp life remaining will be displayed on the two digit display by pressing the timer reset button.

**Solenoid Valve Output:** The UV power source is capable of controlling a solenoid valve using the remote solenoid interface (RSI) accessory, which will shut off water flow during alarm conditions.

**Low UV Intensity:** If the output of the UV detection system falls below 40mj/cm<sup>2</sup>, a low UV alarm will be initiated and error code **E1** will be displayed. If a solenoid valve is installed it will be deactivated to stop the flow of water.

**Alarm Override:** The UV power source has an alarm override feature to disable the audio alarm when the system has entered a low UV alarm state. Pressing the button during error code **E1** will initiate the override, which is active for 24hrs, but can be reset indefinitely. The alarm override feature will not function if the lamp has failed. The display will read error code **E4** while the alarm override is active.



**CAUTION:** The water treated by the unit will not be properly disinfected when the alarm override is in operation and should not be consumed without boiling.

**UV Sensor Error:** If the UV Sensor Probe is not connected to the UV power source, or if communication with sensor is not possible, the error code **E3** will be displayed. Verify that the sensor plug is fully inserted into the UV power source before replacing the UV Sensor Probe. The system also includes a sensor self test mode which is automatically executed if the diagnostic display is activated. If the sensor fails the self test, the **E7** error code is displayed and the sensor will need to be replaced.

## Display & ERROR Codes Summary

The UV power source displays the following codes to announce system status and/or problems. If more than 1 code is applicable, all active codes will be displayed in sequence.

**E1 – Low UV Alarm**  
**E3 – Sensor Communication Error**  
**E4 – Alarm Override Active**  
**E5 – Change Lamp Reminder**  
**E6 – Lamp Life Expired – Change lamp**  
**E7 – Sensor Self Test Failure**  
**oh – chamber over heat**

## Operating and Maintenance

Your UV system is on continuously during normal use.

After periods of not using your water supply exceeding 2-3 days, it is recommended to open all faucets and flush your plumbing lines for a minute or two.

**Caution:** Protect your unit from freezing. Drain all water from the unit if freezing temperatures exist.

**Ultraviolet lamp replacement:** The ultraviolet lamp located inside the chamber will operate effectively, around the clock, for approximately one year. While the lamp will light longer than this, the UV light penetration may fall below the prescribed safety level. Therefore, annual lamp replacement is necessary regardless of apparent condition.

### Replacing the UV lamp and cleaning the quartz sleeve

**Note:** Do not touch the lamp or the quartz sleeve with your fingers. Handle by ends only or wear soft gloves.

**1** Unplug the system from the electrical outlet, turn off all water supplies to the unit, and de-pressurize system

**2** Carefully extract the lamp connector from the sleeve gland nut assembly to expose just the top of the lamp. While holding the lamp base firmly, remove the lamp connector. **Caution:** lamp base can be very hot – be careful not to drop lamp into quartz sleeve as it is easily broken.

**3** Carefully slide the UV lamp out of the quartz sleeve and discard according to local disposal regulations.

**4** Remove the quartz sleeve by loosening the gland nut(s) and carefully extracting it from unit. **Caution:** The quartz sleeve is fragile and is easily chipped or broken – use care when removing or installing.

**5** Clean the quartz sleeve with a vinegar solution or any readily available scale removal product (**Limeaway, CLR etc.**)

**6** Re-install the quartz sleeve – replace “O” ring(s) if they appear damaged.

**7** Install new lamp by reversing procedure described in step 2 above.

**8** Slowly open water supply valve and purge air from system – verify that there are no leaks before reconnecting to AC power.

## RESETTING THE LAMP CHANGE TIMER


**1** The lamp change timer is reset by disconnecting the UV power source from the AC supply, waiting for fifteen seconds and reconnecting to the AC supply while depressing and holding the timer reset button. The AC power source will emit a solid three second beep indicating that the reset was successful. The reset button can now be released. *It is not possible to reset the lamp change timer unless the timer is in the grace period, lamp change, or lamp failure alarm mode. If you need to reset the lamp change timer prior to the end of one full year there are special instructions included with all replacement lamps describing the necessary procedure.*

## LOW UV ALARM

When the UV intensity level falls below  $40\text{mj}/\text{cm}^2$ , the system enters the Low UV Alarm state and the **E1** error code is displayed. If installed, the solenoid valve will shut off water flow.


The Low UV Alarm Flow Chart on page 9 simplifies resolving Low UV Alarm conditions.


## UVT% ESTIMATOR CHART<sup>note 1</sup>

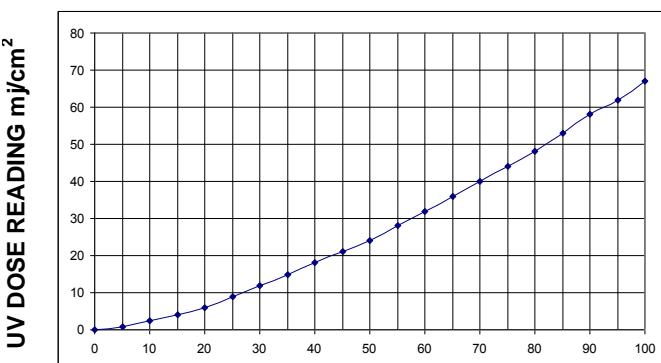

### Note 1

- Chart is only valid with new lamp, sleeve and sensor.
- operate system for thirty minutes and allow water to flow for five minute before taking reading.
- If UV dose reading below the alarm threshold of  $40\text{mj}/\text{cm}^2$  use diagnostic display function to read dose level.
- Validate system performance by rinsing and filling disinfection chamber with water of known quality. eg ( bottled water )

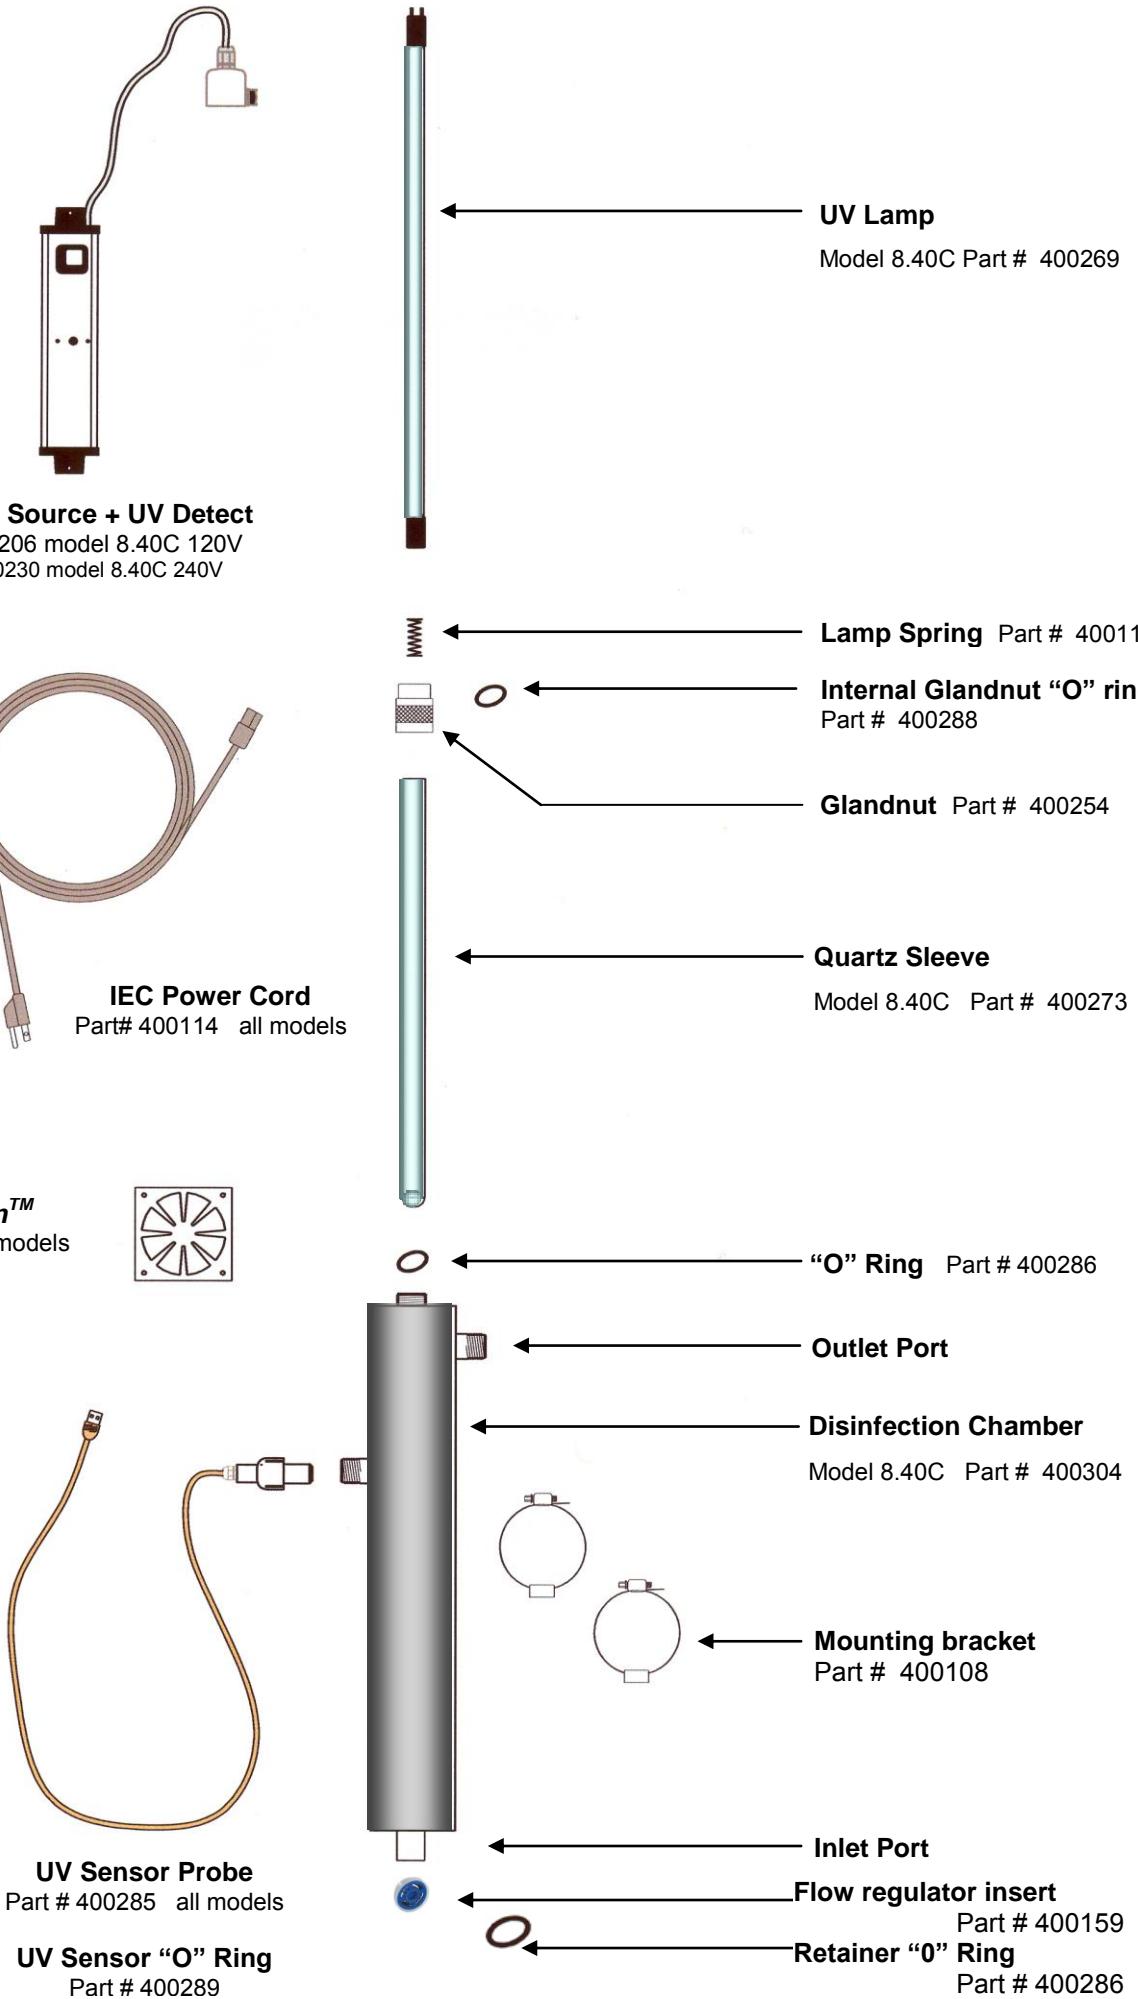

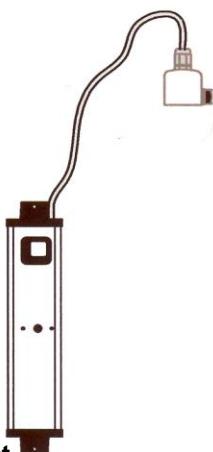

**UV Power Source + UV Detect**

Model 11.40C 120V Part # 400206


Model 11.40C 240V Part # 400230

**Model 14.40C 120V Part # 400373**

Model 14.40C 240V Part # 400496

**Model 20.40C 120V Part # 400250**

Model 20.40C 240V Part # 400497

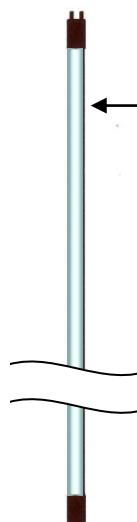


**UV Lamp**

Model 11.40C Part # 400270

Model 14.40C Part # 400158

Model 20.40C Part # 400271

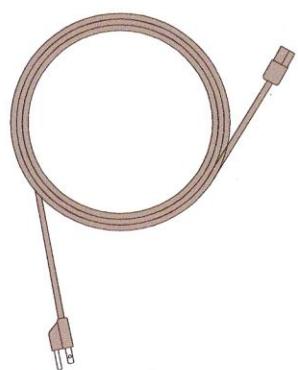

**IEC Power Cord**

Part# 400114 120V



**Lamp Spring** Part # 400354



**Quartz Sleeve**


Model 11.40C Part # 400274

Model 14.40C Part # 400323

Model 20.40C Part # 400275




**ColdSpot Fan™**  
Part # 400290

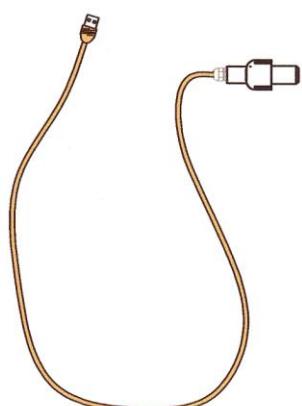

**UV Sensor Probe**  
Part # 400285

**UV Sensor "O" Ring**  
Part # 400289

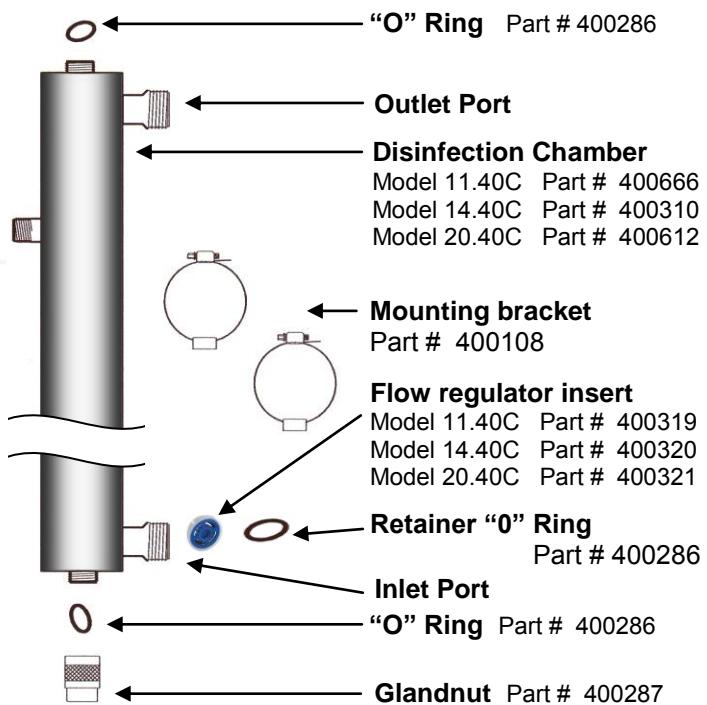

**Outlet Port**

**Disinfection Chamber**

Model 11.40C Part # 400666

Model 14.40C Part # 400310

Model 20.40C Part # 400612

**Mounting bracket**  
Part # 400108

**Flow regulator insert**

Model 11.40C Part # 400319

Model 14.40C Part # 400320

Model 20.40C Part # 400321

**Retainer "O" Ring**  
Part # 400286


**Inlet Port**

**"O" Ring** Part # 400286

**Glandnut** Part # 400287




## READ INSTALLATION CAUTIONS AND VERIFY MINIMUM WATER QUALITY REQUIREMENTS BEFORE PROCEEDING WITH INSTALLATION

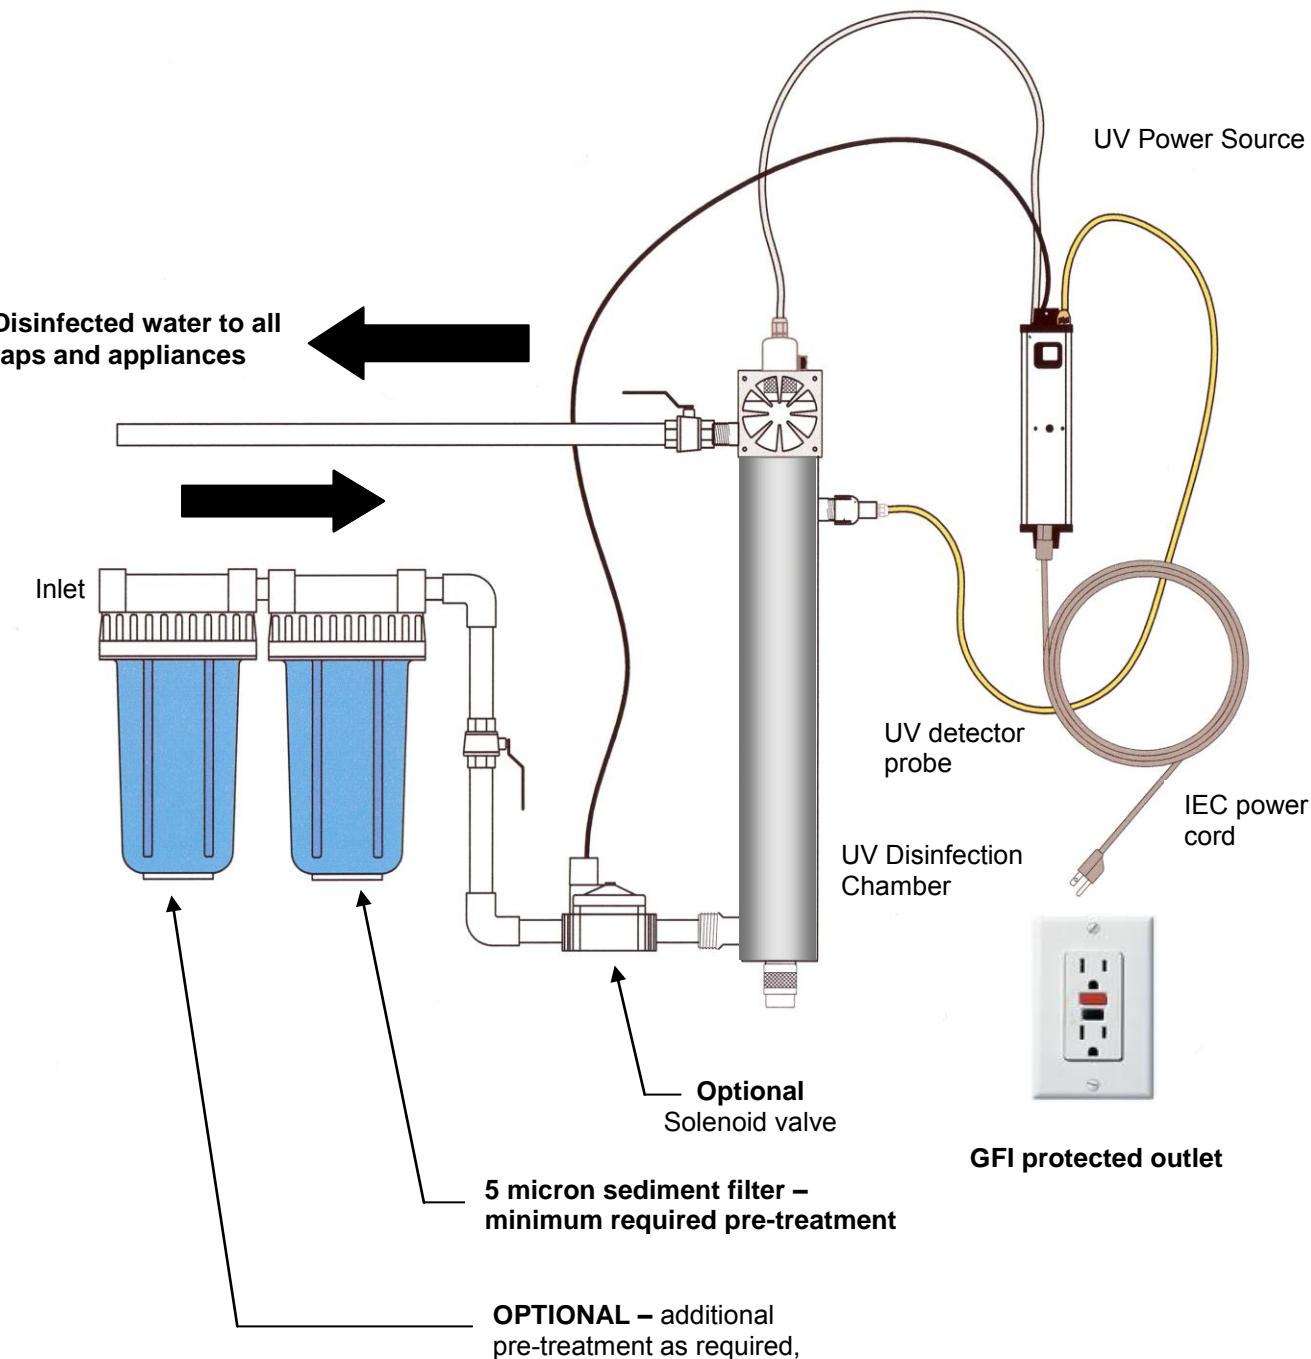

Select a disinfection system mounting location where a potential leak will not cause water damage. UV Dynamics is not responsible for water damage. When the disinfection system can only be located where water damage is a possibility, the installation of an automatic leak detector / shut off device is highly recommended.



## READ INSTALLATION CAUTIONS AND VERIFY MINIMUM WATER QUALITY REQUIREMENTS BEFORE PROCEEDING WITH INSTALLATION

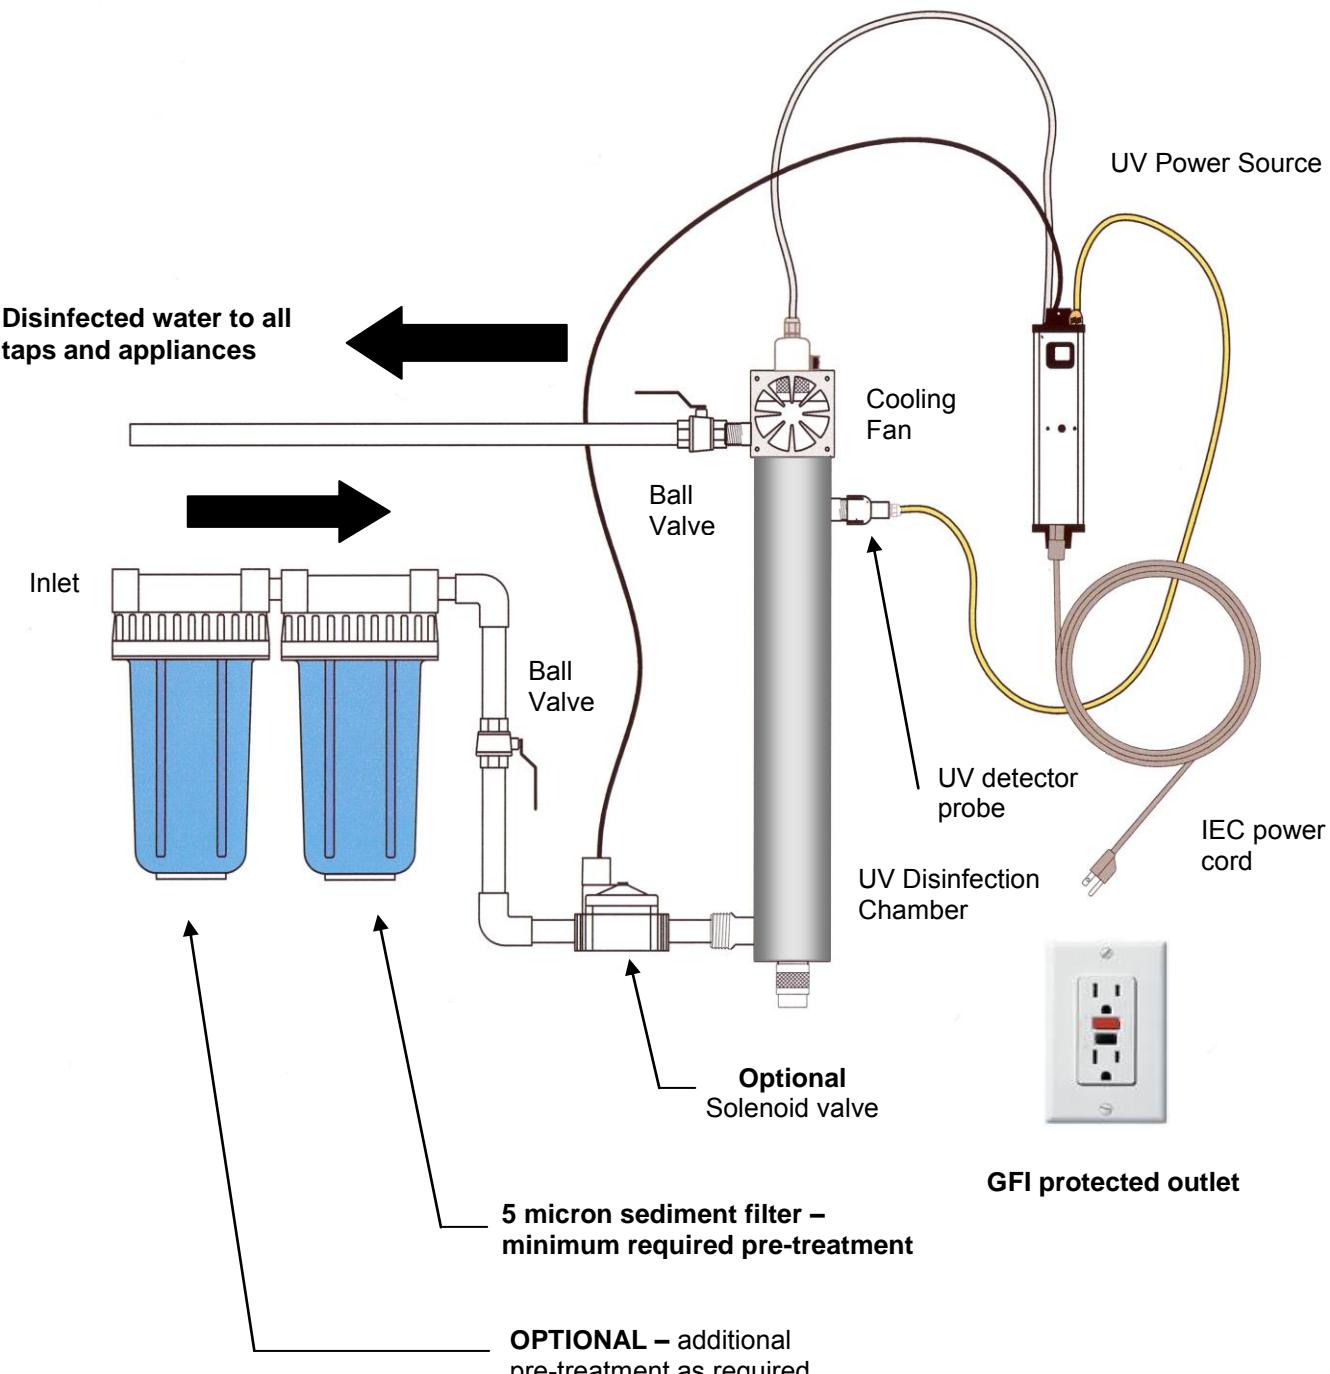


Installation Example - Model 11.40C, 14.40C, & 20.40C



Select a disinfection system mounting location where a potential leak will not cause water damage. UV Dynamics is not responsible for water damage. When the disinfection system can only be located where water damage is a possibility, the installation of a automatic leak detector / shut off device is highly recommended

# LOW UV ALARM – Diagnostic flow chart

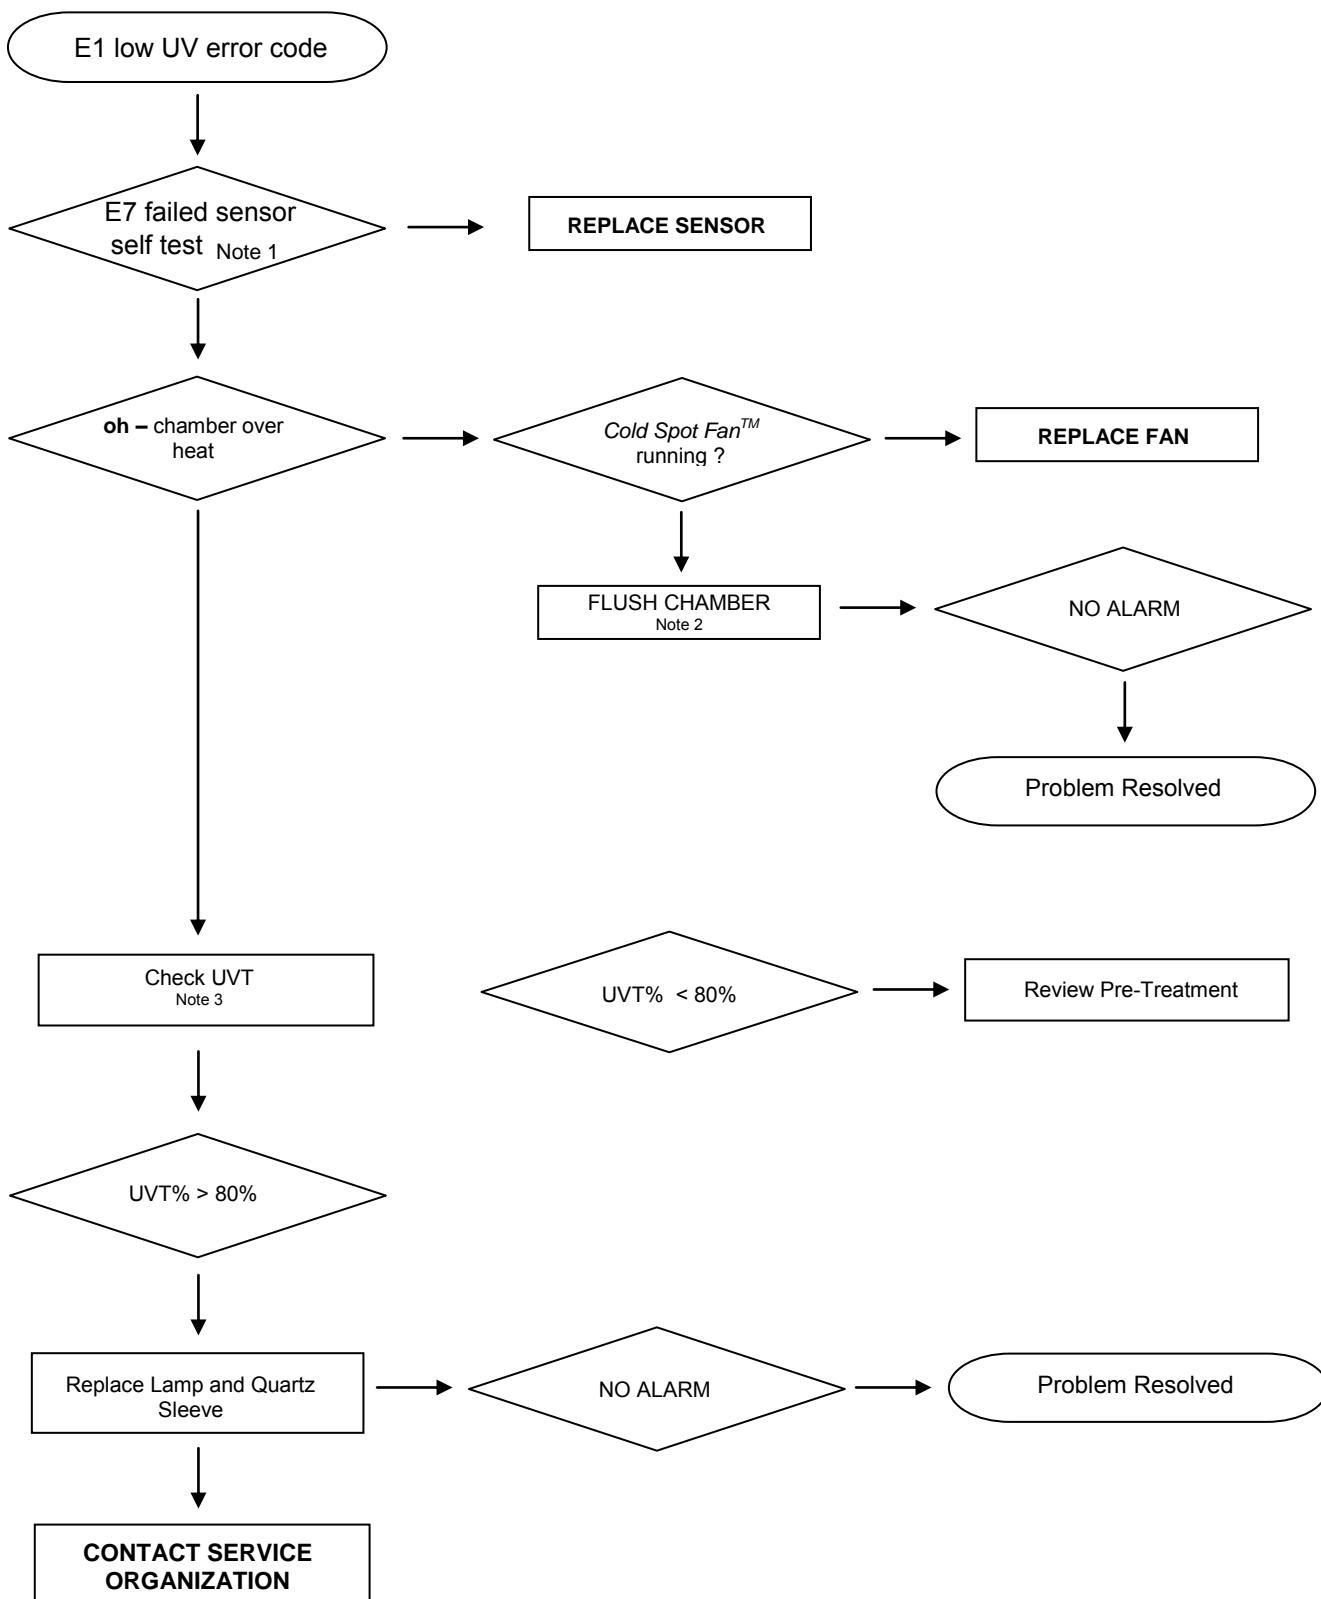

**Note 1** – The Sensor self test is automatically performed whenever a low UV Alarm or diagnostic display is activated.

**Note 2** – Purge hot water from disinfection chamber by closing isolation valves, remove UV sensor from disinfection chamber. Position a pail or other suitable receptacle to contain the purge water and slowly partially open the inlet isolation valve to purge the hot water from the disinfection chamber. If you chose to purge the hot water from the disinfection chamber by placing the solenoid valve in the by-pass mode and using a tap on the plumbing system **you will be required to disinfect the plumbing system as described in this manual before the UV system is returned to service.**

**Note 3** – To measure the UVT% of the water requires a specialized test instrument. Contact your installing dealer or private water testing laboratory.

Product Specification	8.40C	11.40C	14.40C	20.40C
Maximum rated Flow Rate @ 40mj/cm <sup>2</sup> - note 1	8.7 gpm (32.9lpm) (1.97m <sup>3</sup> /hr)	11.0 gpm (41.6lpm) (2.49m <sup>3</sup> /hr)	14.5 gpm (54.8lpm) (3.28m <sup>3</sup> /hr)	20.2 gpm (76.4lpm) (4.58m <sup>3</sup> /hr)
Dynamic Flow Regulator	yes	yes	yes	yes
Isolated Solenoid Drive	yes	yes	yes	yes
Cold Spot Fan™	yes	yes	yes	yes
Lamp watts	49watts	64watts	84watts	112watts
Total watts	63watts	81watts	103watts	136watts
AC Supply Voltage	120V 47-63Hz (240V 47-63Hz)	120V 47-63Hz (240V 47-63Hz)	120V 47-63Hz (240V 47-63Hz)	120V 47-63Hz (240V 47-63Hz)
Annual Lamp Change Timer	yes	yes	yes	yes
Lamp Change Grace Period	28 days maximum	28 days maximum	28 days maximum	28 days maximum
Grace Period Audio Alarm Disable	yes (7day increments)	yes (7day increments)	yes (7day increments)	yes (7day increments)
Reactor Chamber Material	304 SS	304SS	304SS	304SS
Operating Pressure Range	15psi (103kPa) -100psi (689kPa)	15psi (103kPa) -100psi (689kPa)	15psi (103kPa) -100psi (689kPa)	15psi (103kPa) -100psi (689kPa)
Ambient Temperature	15 - 40C (60 - 104F)	15 - 40C (60 - 104F)	15 - 40C (60 - 104F)	15 - 40C (60 - 104F)
Water Temperature Range	4 - 25C (40 - 77F)	4 - 25C (40 - 77F)	4 - 25C (40 - 77F)	4 - 25C (40 - 77F)
Lamp Service Life	9000hrs	9000hrs	9000hrs	9000hrs
Chamber Dimensions (L x D x W)	24.25" x 4" x 6.5" (61.6 x 10.2 x 16.5cm)	32.5" x 4" x 6.5" (82.5 x 10.2 x 16.5cm)	39.75" x 4" x 6.5" (101 x 10.2 x 16.5cm)	50.5" x 4" x 6.5" (128.3 x 10.2 x 16.5cm)
Chamber diameter	3.5" (8.9cm)	3.5" (8.9cm)	3.5" (8.9cm)	3.5" (8.9cm)
Controller Dimensions (L x D x W)	10" x 1.7" x 2.3" (25.4 x 4.3 x 5.8cm)	10" x 1.7" x 2.3" (25.4 x 4.3 x 5.8cm)	10" x 1.7" x 2.3" (25.4 x 4.3 x 5.8cm)	10" x 1.7" x 2.3" (25.4 x 4.3 x 5.8cm)
Shipping Weight	10lbs (5kg)	13lbs (6kg)	14lbs (6.8kg)	17lbs (8.6kg)
Inlet/Outlet Port Size	¾" FNPT inlet ¾"MNPT outlet	1" MNPT inlet ¾" MNPT outlet	1" MNPT inlet 1" MNPT outlet	1" MNPT inlet 1" MNPT outlet

note 1 – actual flow rates may be up to 12% less due to flow regulator variability

This Class A system conforms to NSF/ANSI 55 for the disinfection of microbiologically contaminated water that meets all other public health standards. The system is not intended to convert wastewater or raw sewage to drinking water. The system is intended to be installed on visually clear water.

NSF/ANSI 55 defines wastewater to include human and / or animal body waste, toilet paper, and any other material intended to be deposited in a receptacle designed to receive urine and / or feces (blackwaste); and other waste materials deposited in plumbing fixtures (grey waste).

If this system is used for treatment of untreated surface waters or ground water under the direct influence of surface water, a device found to be in conformance for cyst reduction under the appropriate NSF/ANSI standard shall be installed upstream of the system.

System tested and certified by IAPMO against:

**NSF/ANSI 55 Class A**  
**NSF/ANSI 61**  
**NSF/ANSI 372**  
**CSA-B483.1**



**UV Dynamics®**

WWW.UVDYNAMICS.COM

UV Dynamics  
 a Castle Circuits Inc. Business Group  
 315 Neptune Crescent  
 London, Ontario  
 Canada, N6M 1A9  
 t 800.667.4629 f 519.452.1701  
 email sales@uvdynamics.com

## Warranty

UV Dynamics water disinfection systems are supported with a 'free from defects' **Workmanship and Material** warranty as follows:

- A ten year pro-rated warranty on the stainless steel disinfection chamber
- A three year warranty on the UV power source
- A one year warranty on UV lamps, sleeves and sensor
- Warranty commences from date of purchase. Proof of purchase required

UV Dynamics will repair or replace, at its option, any defective parts covered by the warranty. Shipping and handling are not included in this warranty.

Parts repaired or replaced under the pro-rated warranty will be covered under warranty to the end of the original warranty period. This warranty is also subject to the conditions and limitations outlined under the heading "General Conditions and Limitations" below.

### Warranty for Replacement Lamps and Parts

UV Dynamics warrants replacement lamps, purchased for annual routine maintenance, and other parts purchased to repair product components that are no longer covered by the original warranty, to be free from defects in material and workmanship for a period of one (1) year from the date of purchase. During this time, UV Dynamics will repair or replace, at its option, a defective replacement lamp or part free of charge except for shipping and handling charges. The warranty period on replacement lamps and parts will be verified using date codes and/or purchase receipts. You will be advised as to whether the defective item needs to be returned to UV Dynamics for failure analysis.

### General Conditions and Limitations

None of the above warranties cover damage caused by improper use or maintenance, accidents, acts of God, or minor scratches or imperfections that do not materially impair the operation of the product. The warranties also do not cover products that are not installed as outlined in the applicable Owner's manual.

These limited warranties outline the exclusive remedy for all claims based on a failure or defect in any of these products. They are in lieu of all other warranties whether written, oral, implied or statutory.

Under no circumstance shall UV Dynamics have any liability for liquidated damages for collateral, consequential or special damages, or for loss of profits, or for actual losses or for loss of production or progress of construction, regardless of the cause of such damages or losses. In any event, UV Dynamics aggregate total liability shall not exceed the specific product purchase price. The purchaser agrees to indemnify and hold harmless UV Dynamics from all claims by third parties in excess of these limitations.

UV Dynamics does not assume any liability for personal injury or property damage caused by the use or misuse of any of its products. UV Dynamics shall not in any event be liable for special, incidental, indirect or consequential damages. UV Dynamics liability shall, in all instances, be limited to replacement of the defective product or part and this liability will terminate upon expiration of the applicable warranty period.

**SPECIFICATIONS & WARRANTY**